


Pre-Plumb Hose Assembly Instructions for Dual-Corridor Decon/Rinse in Shelter Models 150-216-284 - PART #5709

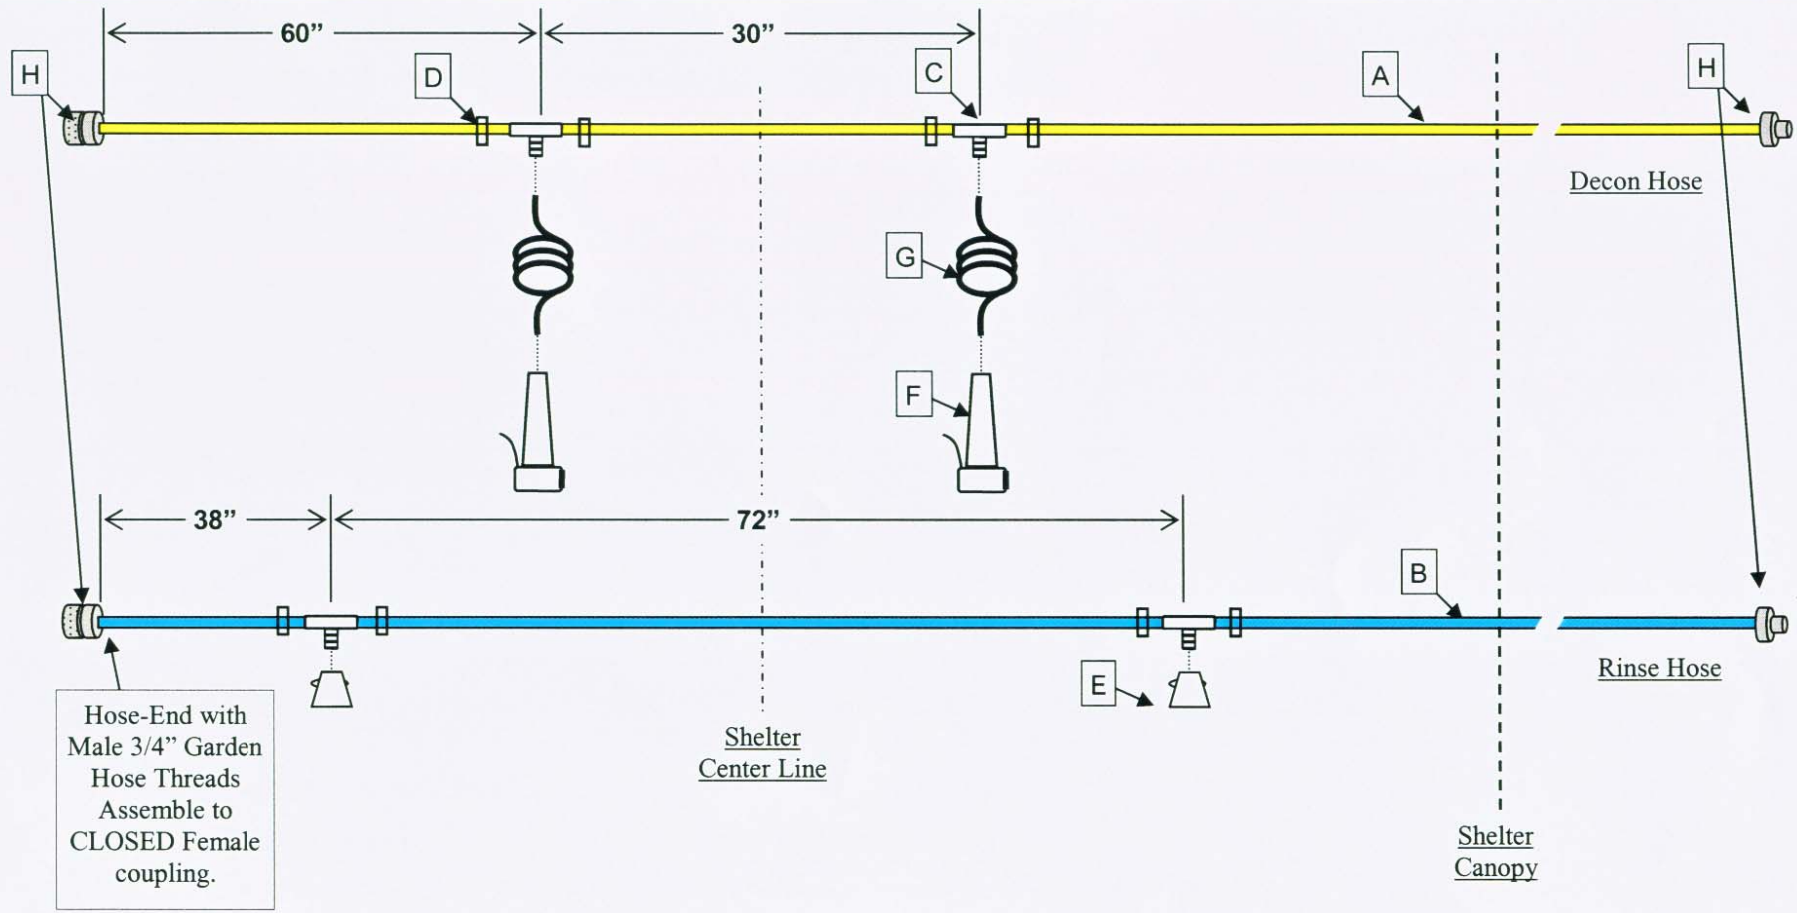

MARK	DESCRIPTION	PART #	Qty.
A	30' Yellow Hose for Pre-plumb (DECON)	5640	1
B	30' Blue Hose for Pre-plumb (RINSE)	5641	1
C	Nylon or Brass 1/2" NPT—barb T-Fitting	5713	4
D	Hose Crimps	5636	8
E	Water Saver Shower Head	5603	2
F	Hand Held Trigger Shower	5721	2
G	Recoil Water Hose (YELLOW)	5722	2
H	Quick Disconnect Set—CLOSED FEMALE	5628	2

REVISIONS	
06/11/03	Original Drawing
10/14/03	Hose Colors and Shower positions